

AD-4401-06 セットポイントユニット

■概要

AD-4401-06 は AD-4401 のリアパネルにある“SETPOINT”端子に接続し AD-4401 の比較値を外部 (AD-4401-06 のデジタルスイッチ) から設定するオプションです。

■注意事項

- ・ AD-4401 との接続は必ず AD-4401 の電源を切ってから行ってください。
- ・ AD-4401 が通電中は AD-4401-06 を取り外さないでください。
- ・ 分解、修理、改造はしないでください。事故や故障の原因になります。


■梱包内容

- ・ 本体 1 (50cm のケーブル付き)


■使用方法

- ・ AD-4401-06 を使用するには、AD-4401 のファンクション設定“SPF-01：比較値の読み込みモード”を 16 桁モード (SPF-01=2) に変更してください。
- ・ AD-4401 のファンクション設定“CALF-14：計量モード”を単純比較投入/排出計量もしくはシーケンシャル投入/排出計量 (CALF-14=1~4) で使用してください。
- ・ AD-4401 の最小目盛 (CALF-03) の設定が 10 以上の場合は、デジタルスイッチの値を 10 倍して取り込みます。

●フロントパネル



●リアパネル

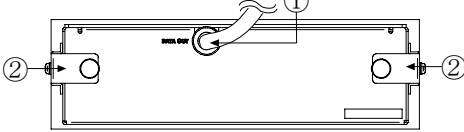

- ①DATAOUT..... AD-4401 (リアパネル) の“SETPOINT”端子に接続します。
- ②ガイドレール..... 制御盤に取り付ける場合使用します。

■仕様

使用温度範囲：-10℃~40℃ (結露しない事)

重量：約 1kg



ケーブル長：約 50cm

外形：「外形寸法図/パネルカット寸法」参照。

注 1) AD-4401-06 の複数台接続は出来ません。

注 2) AD-4401-06 への外部設定入力は出来ません。

■外形寸法図/パネルカット寸法

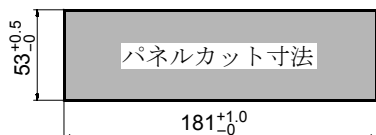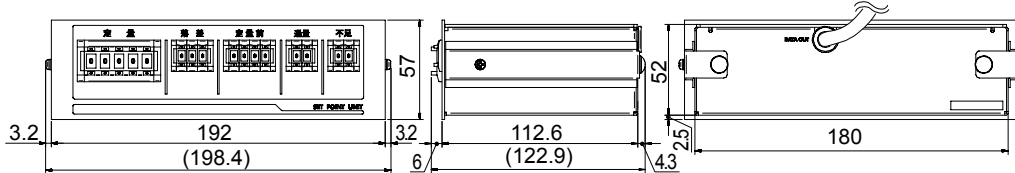

AND
株式会社 エーアンドディ

本社 〒170-0013 東京都豊島区東池袋
3-23-14 (ダイハツ・ニッセイ池袋ビル5F)
TEL03-5391-6126 (代)
FAX03-5391-6129

AD-4401-06 SETPOINT UNIT

Introduction

AD-4401-06 is an optional unit to set the comparison value of the AD-4401 externally (using the digital switch of the AD-4401-06). It connects to the SETPOINT terminal on the rear panel of the AD-4401.

Precautions

- Always turn off the power of the AD-4401 before connecting to it.
- Do not remove the AD-4401-06 from the AD-4401 while the AD-4401 is on.
- Do not disassemble, repair, or modify the AD-4401-06. Doing so may cause an accident or mechanical damage.

Contents

Main unit.....1 (50 cm length cable attached)

Using the AD-4401-06


- Configure the following function settings of the AD-4401.

SPF-01 (Setpoint value read mode): 2 (16-digit mode).


CALF-14 (Weighing mode): 1 to 4. (Customer programmed control mode: Normal batching (1), Loss-in-weight (2); Built-in automatic program mode: Normal batching (3), Built-in automatic program mode: Loss-in-weight (4))

Note: When the minimum division setting (CALF-03) of the AD-4401 is 10 or more, the value of the digital switch is multiplied by 10 before it is imported.

Front panel



Rear panel

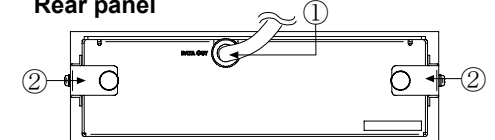

- ①DATAOUT.... Connect this cable to the SETPOINT terminal on the rear panel of the AD-4401.
- ②Guide rail..... Use these rails when attaching the AD-4401-06 to the control cabinet.

Specifications

Operation temperature range : -10 to 40 °C (no condensation)

Weight : Approx. 1kg

Cable length : Approx. 50 cm



External dimensions : Refer to “External dimensions / Panel cut dimensions”.

Notes

- AD-4401-06 units cannot be connected in a series.

- The AD-4401-06 cannot be set externally.

External dimensions / Panel cut dimensions

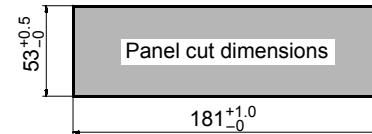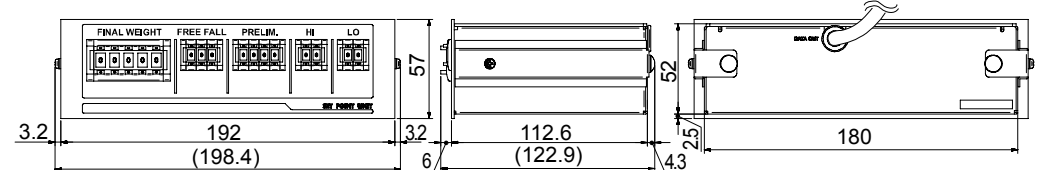

AND
A&D Company, Limited

3-23-14 Higashi-Ikebukuro,
Toshima-ku, Tokyo 170-0013 JAPAN
Tel.: + 81 3 5391 6132
Fax: + 81 3 5391 6148